



Xinetix steadicam rental e.K., fon +49 40 432 50 996  
Kedenburgstr. 44, D-22041 Hamburg - Germany

### **Hill 435 Low Mode Bracket Instructions**

**Note:** The two 1/4-20 holes at top and bottom fit all dovetails. 3/8-16 (One side is Pro) (One side is 3A)  
(Middle is Master/Pro long) Line your dovetail up with the proper line of holes.

The plate can be turned around if you need more or less cantilever to one side or the other.  
The plate can also be cantilevered fore and aft by locating in slots underside.

1. Use the 3mm Allen tool supplied with bracket to remove the factory Arri handle.
2. Remove bracket from carrying pouch and unfold so that the standoff is a 90° to the plate.
3. Insert tool into the top of standoff and start the two screws where the handle was removed.
4. Before they are tight locate the support leg and screw a few turns, now tighten all screws (4) a little at a time until tight.
5. An iris rod is also supplied, it locates on the little flat rectangle pad directly above the accessory plug on the camera right side. Use the same Allen tool to install.
6. Your dovetail can be mounted. (Try to use a screw at each end of the plate to reduce flex in dovetail.) Start with the bracket in the flat position. If the shot requires an angle, the ratchet handle on the side is your angle adjustment.
7. With one hand on the camera. Loosen the ratchet just one full revolution to disengage the teeth. ***There is no stop!*** Four turns and it will come all the way out. Position cameras angle and lock it down. Remember that your C.G. will change. If you angled the lens up the sled must move forward. Lens angled down and the sled comes Aft.

#### **Jerry Hill Steadicam Products Limited Warranty**

This product is warranted against manufacturing defects in material and workmanship for one (1) year from the date of purchase from J.H. Steadicam Prod. Within this period JHSP will repair the product without charge for parts and labor. This warranty does not cover damage or failure caused by or attributable to acts of god, abuse, misuse, improper or abnormal usage, faulty installation, improper maintenance, neglect, or any other incidence of stupidity. **JHSP is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product or other damages to any economic loss, loss of property, loss of revenues or profit, or costs of removal, installation or reinstallation. Except as provided herein, JHSP makes no express warranties, and any implied warranty of merchantability or fitness for a particular purpose limited in its duration to the written limited warranties set forth herein.** There will be charges rendered for repairs to the product made after the expiration of the aforesaid one (1) year warranty period. **Jerry Hill Steadicam Products.**