
Kirk Ent. QRC-2.5 (2.5 inch quick release clamp)

KS-6x6 and KS-8x8

Kirk Ent. Quick Release Clamps
The dovetail plate made by Ken Lab and included with the gyro can be used in many different ways. The .140 dia., 1/4" and 3/8" are meant for a set screw of your choice to be threaded into the quick clamp and slip fit into the dovetail plate to prevent the quick clamp from twisting.

The center 3/8-16 thumbwheel is used to secure the clamp to the gyro by using the provided 3/16 allen key. By turning the thumbwheel left or counterclockwise, the clamp can be tightened onto the gyro.

To remove the clamp, do the reverse, turn right or clockwise to loosen the clamp.

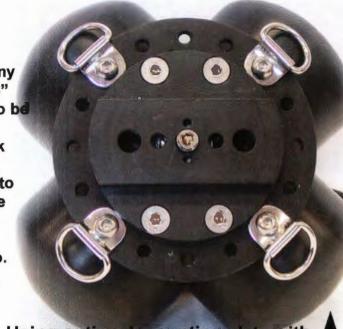

Using optional mounting plate with D-Rings and Kirk Ent. QRC-4 (4 inch quick release clamp)



